

- Settings
 - General
 - System Information
 - Battery Information
 - Boot Sequence
 - UEFI Boot Path Security
 - Date/Time
 - System Configuration
 - Video
 - Security
 - Secure Boot
 - Intel® Software Guard Extensions™
 - Performance
 - Power Management
 - POST Behavior
 - Manageability
 - Virtualization Support
 - Wireless
 - Maintenance
 - System Logs
 - About
 - SupportAssist System Resolution

Intel® SpeedStep™

 Enable Intel® SpeedStep™

This option enables or disables the Intel® SpeedStep™ mode of the processor.

- Disabled = Places the processor into the highest performance state and prevents the Intel® SpeedStep™ applet or native operating system driver from adjusting the processor's performance.
Enabled = Allows the Intel® SpeedStep™-enabled CPU to operate in multiple performance states.

Settings

- General
 - System Information
 - Battery Information
 - Boot Sequence
 - UEFI Boot Path Security
 - Date/Time
- + System Configuration
- + Video
- + Security
- + Secure Boot
- + Intel® Software Guard Extensions™
- + Performance
- + Power Management
- + POST Behavior
- + Manageability
- + Virtualization Support
- + Wireless
- + Maintenance
- + System Logs
- + About
- + SupportAssist System Resolution

